


# Sing 'N Jam

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Sing 'n Jam provides hours of musical fun for children ages 5 and up. It has everything you need to start performing: a microphone, amplifier, and microphone stand.

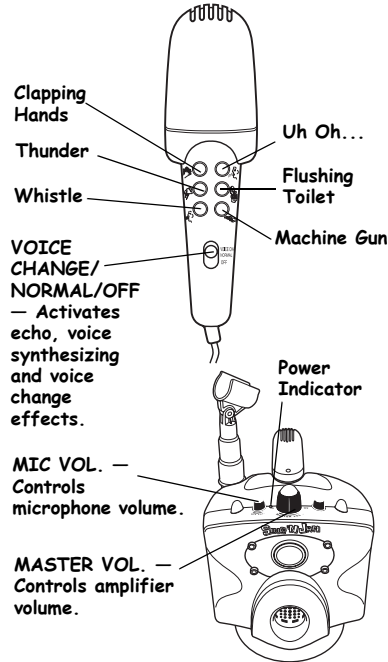

## INSTALLING BATTERIES

Your Sing 'n Jam requires five C batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

### Cautions:

- Use only fresh batteries of the required size and recommended type.

- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then remove the cover.
2. Place the batteries in the compartment, as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and tighten it with the screw.

When the Sing 'n Jam stops operating properly, replace the batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the Sing 'n Jam for an extended period of time, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

## USING THE MICROPHONE STAND

Slide the microphone stand into its base. Lower the stand to store it, or extend it to the desired height for use.

## CONNECTING THE MICROPHONE

1. Insert the microphone's green and yellow Y-adaptor plugs into the matching **Mic Sound effect** jacks on the back of the Sing 'n Jam.
2. Place the microphone in the microphone stand holder. The microphone only fits in the holder one way. Do not force it.

## PLAYING THE SING 'N JAM

1. To turn on the Sing 'n Jam, rotate **MASTER VOL.** clockwise until it clicks. The power indicator lights.
2. Adjust **MASTER VOL.** to a comfortable listening level.
3. Slide **VOICE CHANGE/NORMAL/OFF** to **NORMAL**.
4. Rotate **MIC VOL.** to the desired level.
5. Sing or speak into the microphone, or press any sound effect button on the microphone. The Sing 'n Jam automatically adds echo to the sound and the three lights on the top and the front of the amplifier flash.
6. Slide **VOICE CHANGE/NORMAL/OFF** to **VOICE CHANGE**.
7. Speak into the microphone. Adjust **Pitch** on the side of the microphone to the desired voice pitch level. You can talk or press any sound effect button at the same time.
8. To turn off the Sing 'n Jam, rotate **MASTER VOL.** counterclockwise until it clicks. The power indicator turns off.
9. Slide **VOICE CHANGE/NORMAL/OFF** to **OFF**.

**Note:** The knob to the right of **MASTER VOL.** can be rotated but has no function.

## CARE

Keep the Sing 'n Jam dry; if it gets wet, wipe it dry immediately. Use and store the Sing 'n Jam only in normal temperature environments. Handle the Sing 'n Jam carefully; do not drop it. Keep the Sing 'n Jam away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Sing 'n Jam's internal components can cause a malfunction and might invalidate its warranty. If your Sing 'n Jam is not performing as it should, take it to your local RadioShack store for assistance.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99